

# STEMCO SAFETY PRODUCTS WIG-WAG INSTALLATION INSTRUCTIONS

## Low Air Pressure Indicator

Mount above windshield in operator's forward field of view. Connect air inlet on the Wig-Wag to terminal block under dash, or any other air line which is under constant reservoir pressure.

**WARNING: DO NOT ADJUST THE SENSITIVITY OF THIS DEVICE.** All warranties may be canceled and/or declared void if returned parts reveal evidence of unauthorized adjustment or tampering.




*A Higher Standard of Performance.™*

P.O. Box 1989 • Longview, Texas 75606-1989

(903) 758-9981 • 1-800-527-8492 • FAX 1-800-874-4297 • [www.stemco.com](http://www.stemco.com)

Form No. 343 (Rev. 9/99)

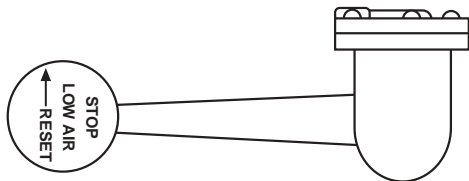

Hudson 1-9117